


Digilock TC - Wood Locker Installation: Recess Mount with Pull


- 1 Make sure that the locker door has a cutout for the recess mounting cup with pull.

Figure 1

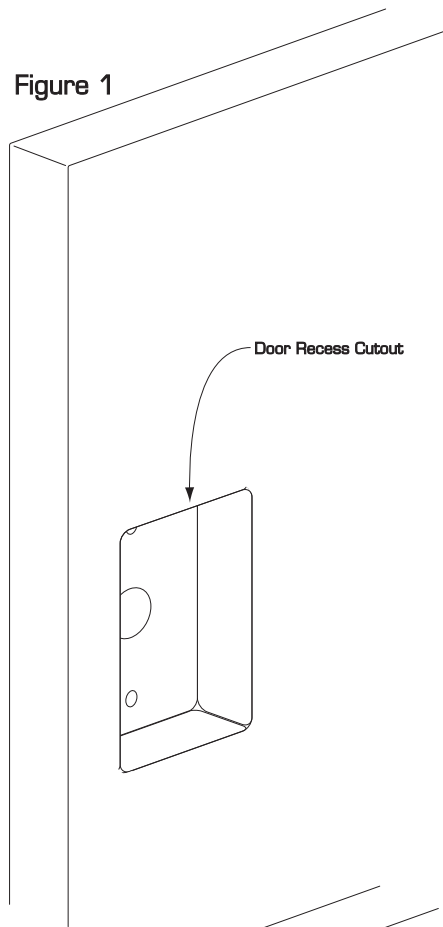

- 2 **Warning:** Do not touch the rear unit connector against metal or other conductive surfaces. This may short the pins and cause damage to the lock. (See Figure 2)

Figure 2

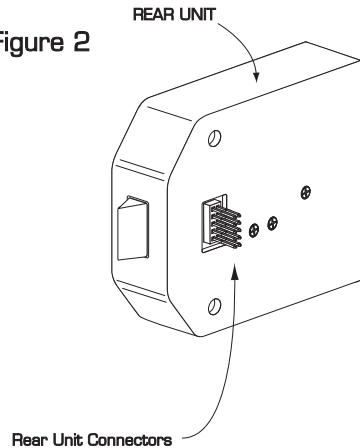

- 3 Place the rear unit against the rear face of the door, aligning its mounting holes with the door. (See Figure 3)

Attach the lock washers to the mounting screws (10-24) then place the mounting screws through the mounting holes. At this point, you should be able to see the tips of the mounting screws from the front face of the locker door.

Place the recess mounting cup with pull into the door recess cutout and place the front unit into the recessed mounting cup with pull connecting it with the rear unit. Make sure to align the pins of the rear unit connector with the front unit connector. Tighten the mounting screws.

(See Figure 3)

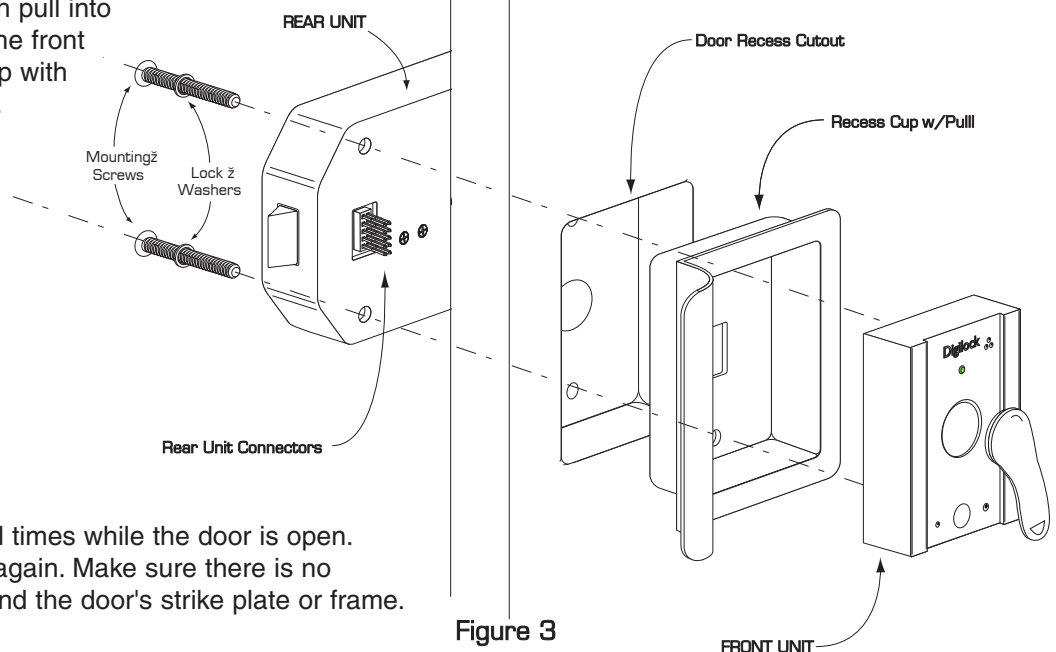


Figure 3

- 4 Test the unit's operation several times while the door is open. Close the door, and test the unit again. Make sure there is no binding between the bolt or latch and the door's strike plate or frame.