
Installation Instructions Digilock KP-H Recess Mount with Pull Handle


Door Preparation: Before Installing Digilock you must prep your door by following these steps:


- 1. Install a Strite Plake (used to engage bolt/latch while locked)
- 2. Drill lock mounting holes
- 3. Mortise your door for the recess cup
- 4. Install your lock

Install either a Security Strike or L Bracket strike plate (not provided) on your door as shown in Figure 1. Be sure you install the strike plate at the same height as you would like lock. If you need to order strike plates, contact a Digilock sales representative.

Follow the directions on the "Wood Door Hole Template" on page 4 and use Figure 2 (lock mounting hole template) below to drill your lock mounting holes.

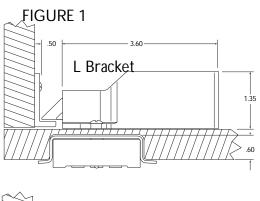


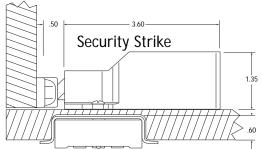


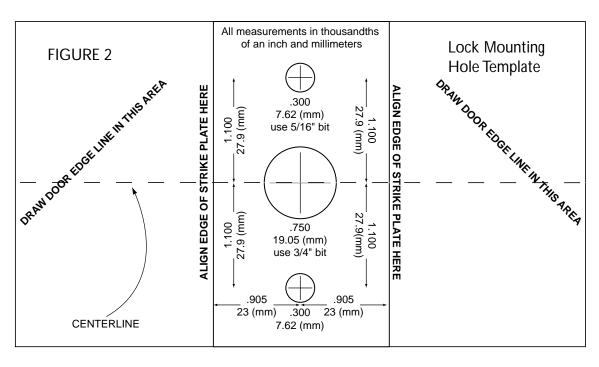


3 Use the template below, alinging the center holes with the center holes drilled on your door to mortise the recess cutout.

DIGILOCK RECESS CUP TEMPLATE STANDARD WIDTH

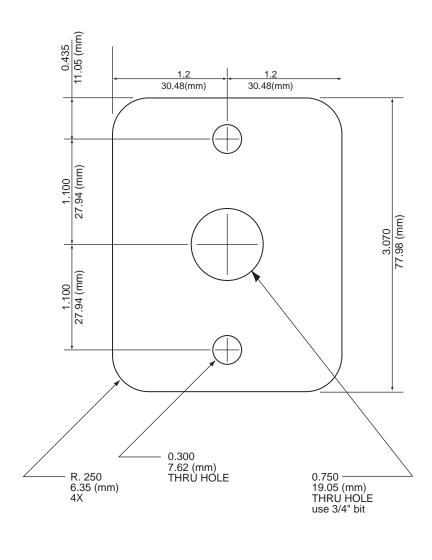

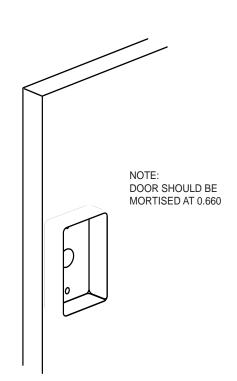


WARNING: Do not touch the rear unit connector against metal or other conductive surfaces. This may short the pin and cause damage to the lock. (See Figure 3)

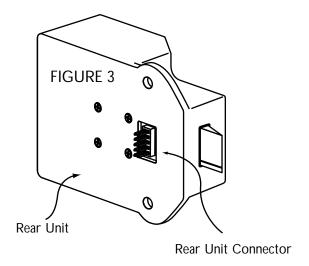

3 Place the rear unit against the rear face of the door, aligning its mounting holes with the door.
(See Figure 4)

Attach the lock washers to the mounting screws (10-24) then place the mounting screws through the mounting holes. At this point, you should be able to see the tips of the mounting screws from the front face of the locker door.

Place the recess mounting cup with pull handle into the door recess cutout (making sure the mounting screws go through the holes of the recess cup) and place the front unit into the recessed mounting cup connecting it to the rear unit. Make sure to align the pins of the rear unit connector with the front unit. An audible triple beep indicates that the lock was connected properly. If you do not hear this beep, reconnect the front and rear units. Tighten the mounting screws. (See Figure 4)

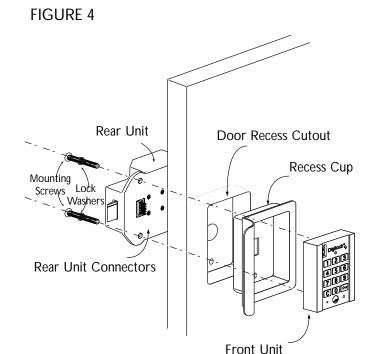

4 Test the unit's operation several times while the door is open. Close the door and test the unit again. Make sure there is no binding between the latch and the door's strike plate or frame.

Wood Door Hole Template Instructions

Center the template over the strike plate and align edge of strike plate with the line on template, and close door while Using a pencil, holding the template in place mark the door edge Edge of Strike Plate on the template and also mark the centerline on the door edge. Open door, remove template. Strike Plate Centerline Place the template over the door alinging it with the centerline on Mark this door the template and the centerline edge on the mark you made on the door edges paper template as well as aligning the door edge with the door edge you made on the template. Mark the centers of all three holes and drill the holes as defined on the template.