


## Digilock

### Instructions for Using a Power Jumper

If the batteries are low, dead or disconnected a power jumper may be used to provide external power to the unit while simultaneously entering a valid operating code/key for access to the lock.

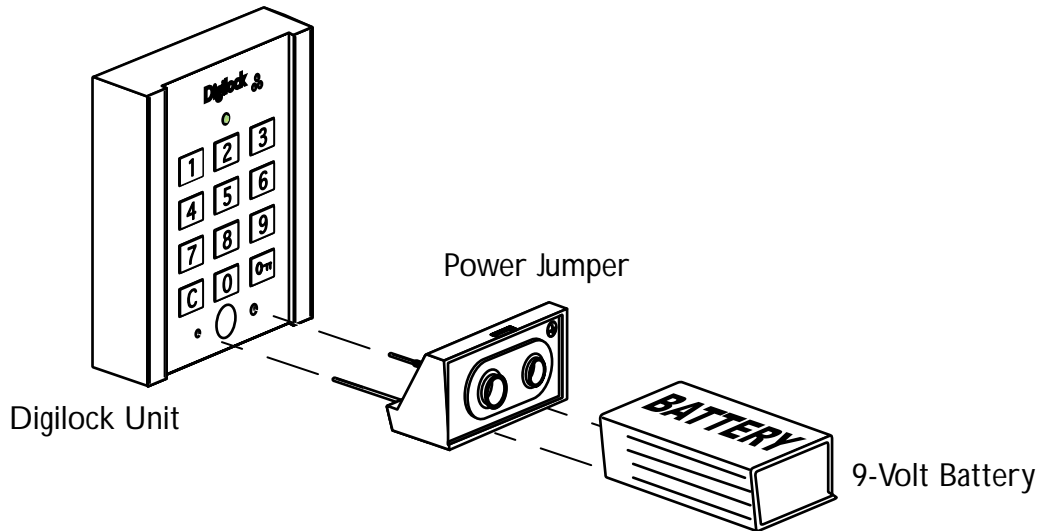

- 1) Attach a 9-Volt alkaline battery to the power jumper and insert in the two small insertion holes located on the front lower face of the lock. (For Digilock T-30, T-52 and T-70 the insertion holes are located on the upper face of the front unit).
- 2) When the unit is properly inserted to the lock, it will emit a solid red LED.
- 3) While the LED is lit, enter a valid operating code/key to gain access to the lock.
- 4) After gaining access to the lock, change the batteries. See Digilock "Instructions for Changing the Batteries."