

# Digilock WP - Wood Locker Installation: Surface Mount with Pull

- ① Follow the instructions on the enclosed template and drill the 3 holes into the door.  
(See Figure 1)

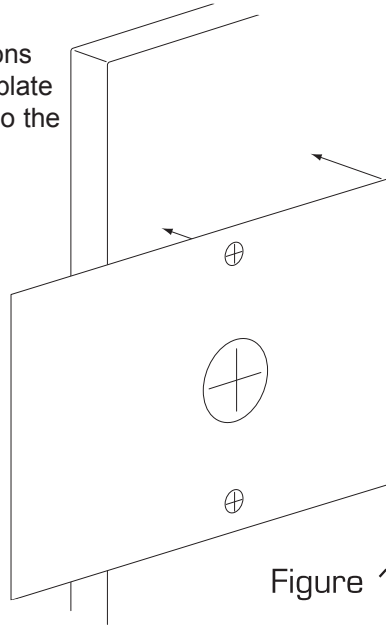


Figure 1

- ② Warning: Do not touch the rear unit connector against metal or other conductive surfaces. This may short the pins and cause damage to the lock.

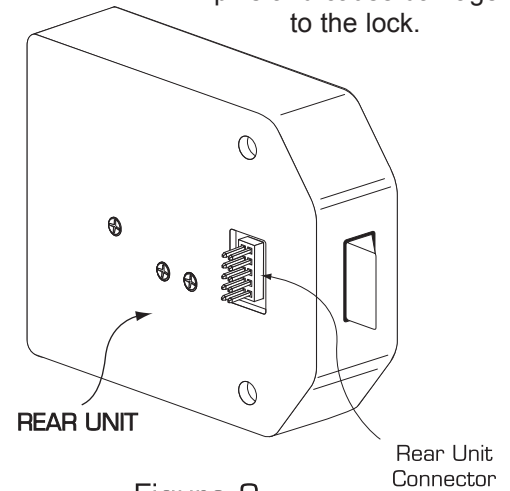


Figure 2

- ③ Attach the pin extender to the end of the front unit connector. **Do not attach the pin extender to the rear unit.** Be sure to align the 10 pins of the pin extender to the 10 positions of the front unit connector.  
(See Figure 3)

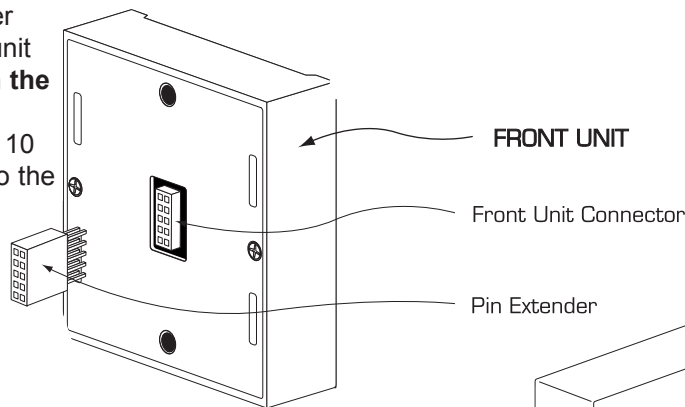


Figure 3

- ④ Place the rear unit against the rear face of the door, aligning its mounting holes with the door.  
(See Figure 4)

Attach the lock washers to the mounting screws (10-24) then place the mounting screws through the mounting holes. At this point, you should be able to see the tips of the mounting screws from the front face of the locker door.

Place the front unit along with the pull handle on the front face of the door connecting it with the rear unit. Make sure to align the pins of the rear unit connector with the extender of the front unit connector. Tighten the mounting screws.

(See Figure 4)

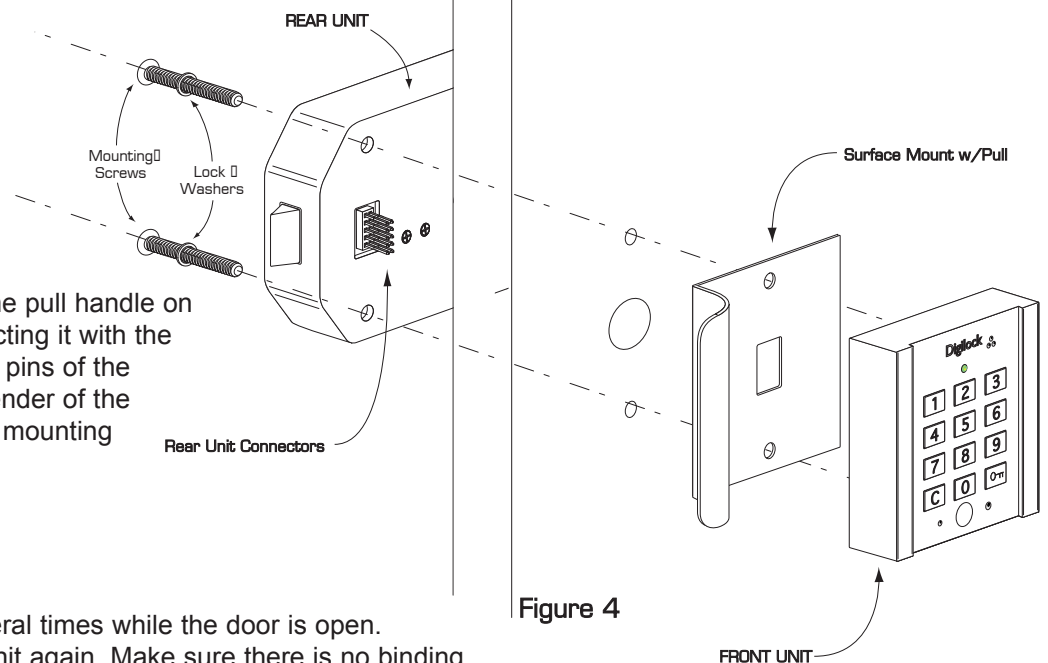


Figure 4

- ⑤ Test the unit's operation several times while the door is open. Close the door, and test the unit again. Make sure there is no binding between the latch and the door's strike plate or frame.